



nickelodeon™
TEENAGE MUTANT NINJA
TURTLES™

NINJA ACTION
FRONT FLIPPIN'
RAPH


1. Attach support
 brace as
 shown.

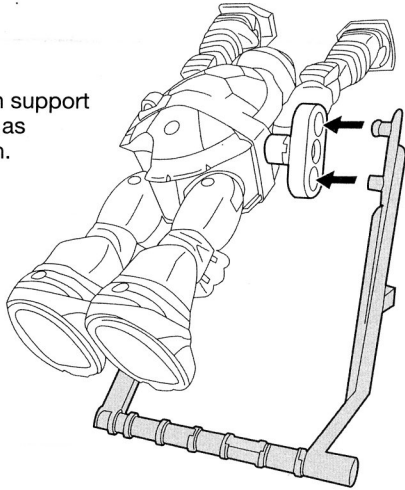


2. Attach weapon in
 hands as shown.

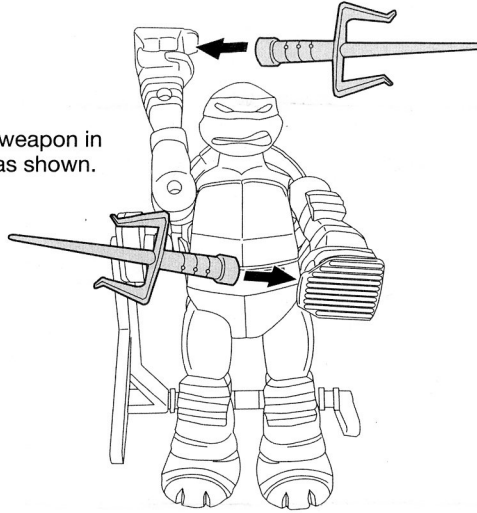

3. Hold figure still and
 wind up clockwise,
 as shown.
 Stop once you hear
 clicking sound.

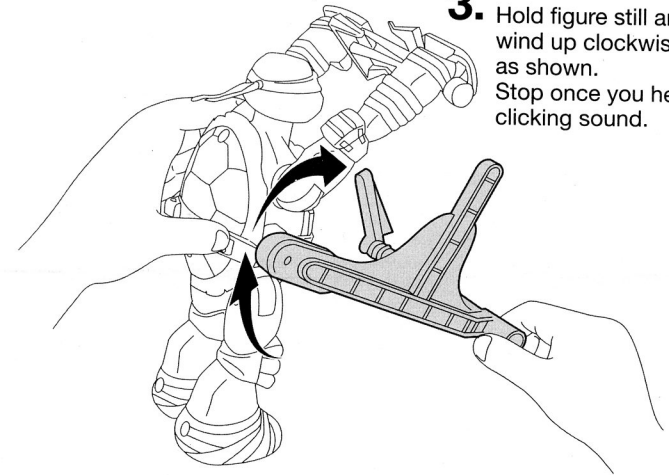

4. Set figure down, making sure
 brace is sitting flat on surface,
 as shown. Press down on Turtle
 head to activate Ninja Action!

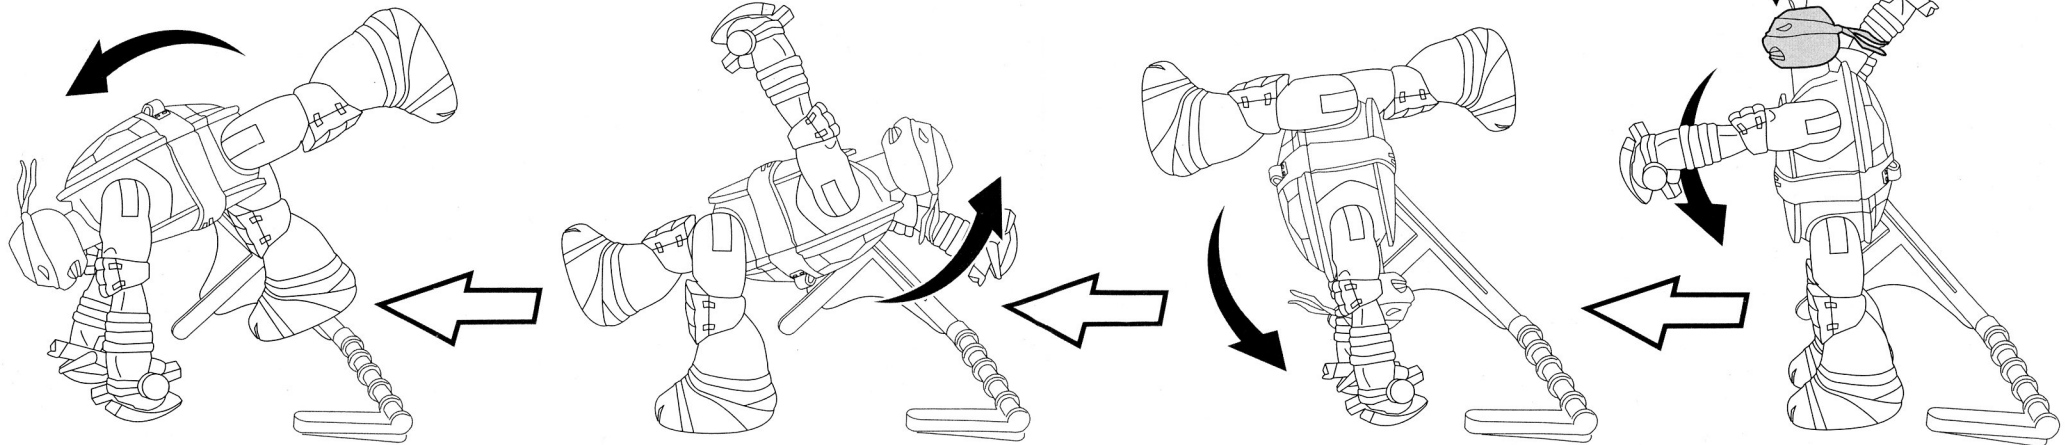

Ages 4 and up
 Asst. #91620
 Item #91641

* Works best on hard, flat surfaces.



©2014 Viacom International Inc. All Rights Reserved. Nickelodeon, TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom International Inc. ©2014 Viacom Overseas Holdings C.V. All Rights Reserved. Nickelodeon, TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom Overseas Holdings C.V. ©2014 Playmates. Playmates International Company Ltd. 23/F, The Toy House, 100 Canton Road, TST, Kowloon, Hong Kong. PRINTED IN CHINA.

For more detailed instructions visit
www.Playmatestoy.com